


4.1 - Wall Preparation

2- Windows & Doors

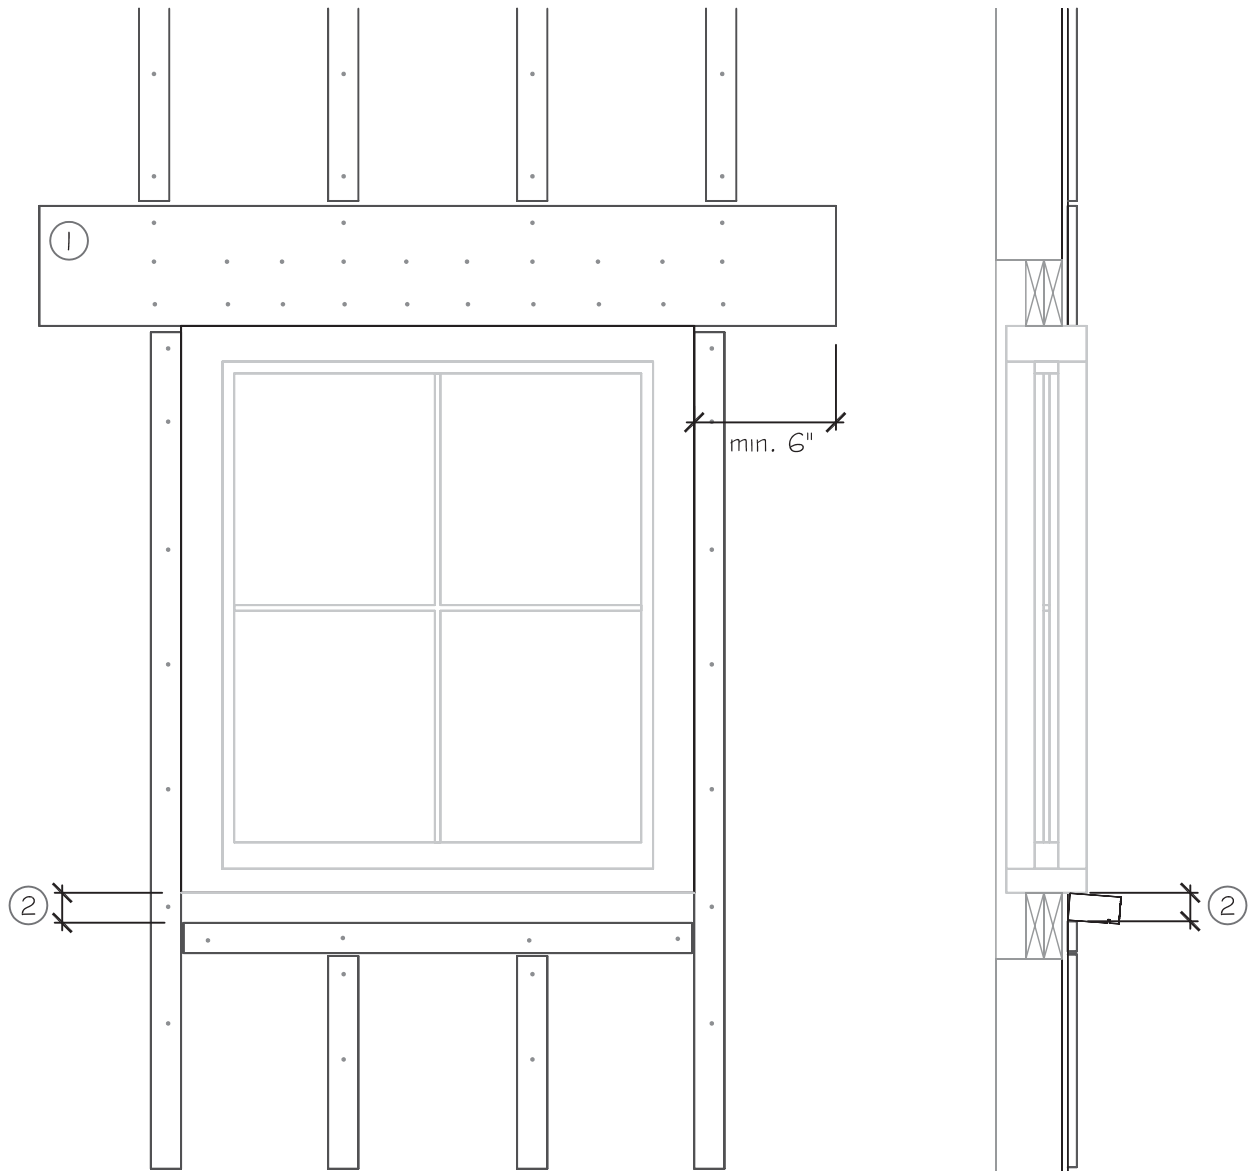

LEGEND:

- 1- Plywood reinforcement header sized according to the header chart in Section 3. Reinforcement header must extend 6" (152mm) from the opening on each side
- 2- For installation of the Novabrik window sill, fasten a horizontal furring strip at a distance equal to the height of the sill plus 1/8" (3mm), down from the bottom of the opening. Check spacing with actual sill piece. See 4.3.1 for sill installation.

