


4.2- Novabrik Installation

5- Inside corner with overlapping bricks

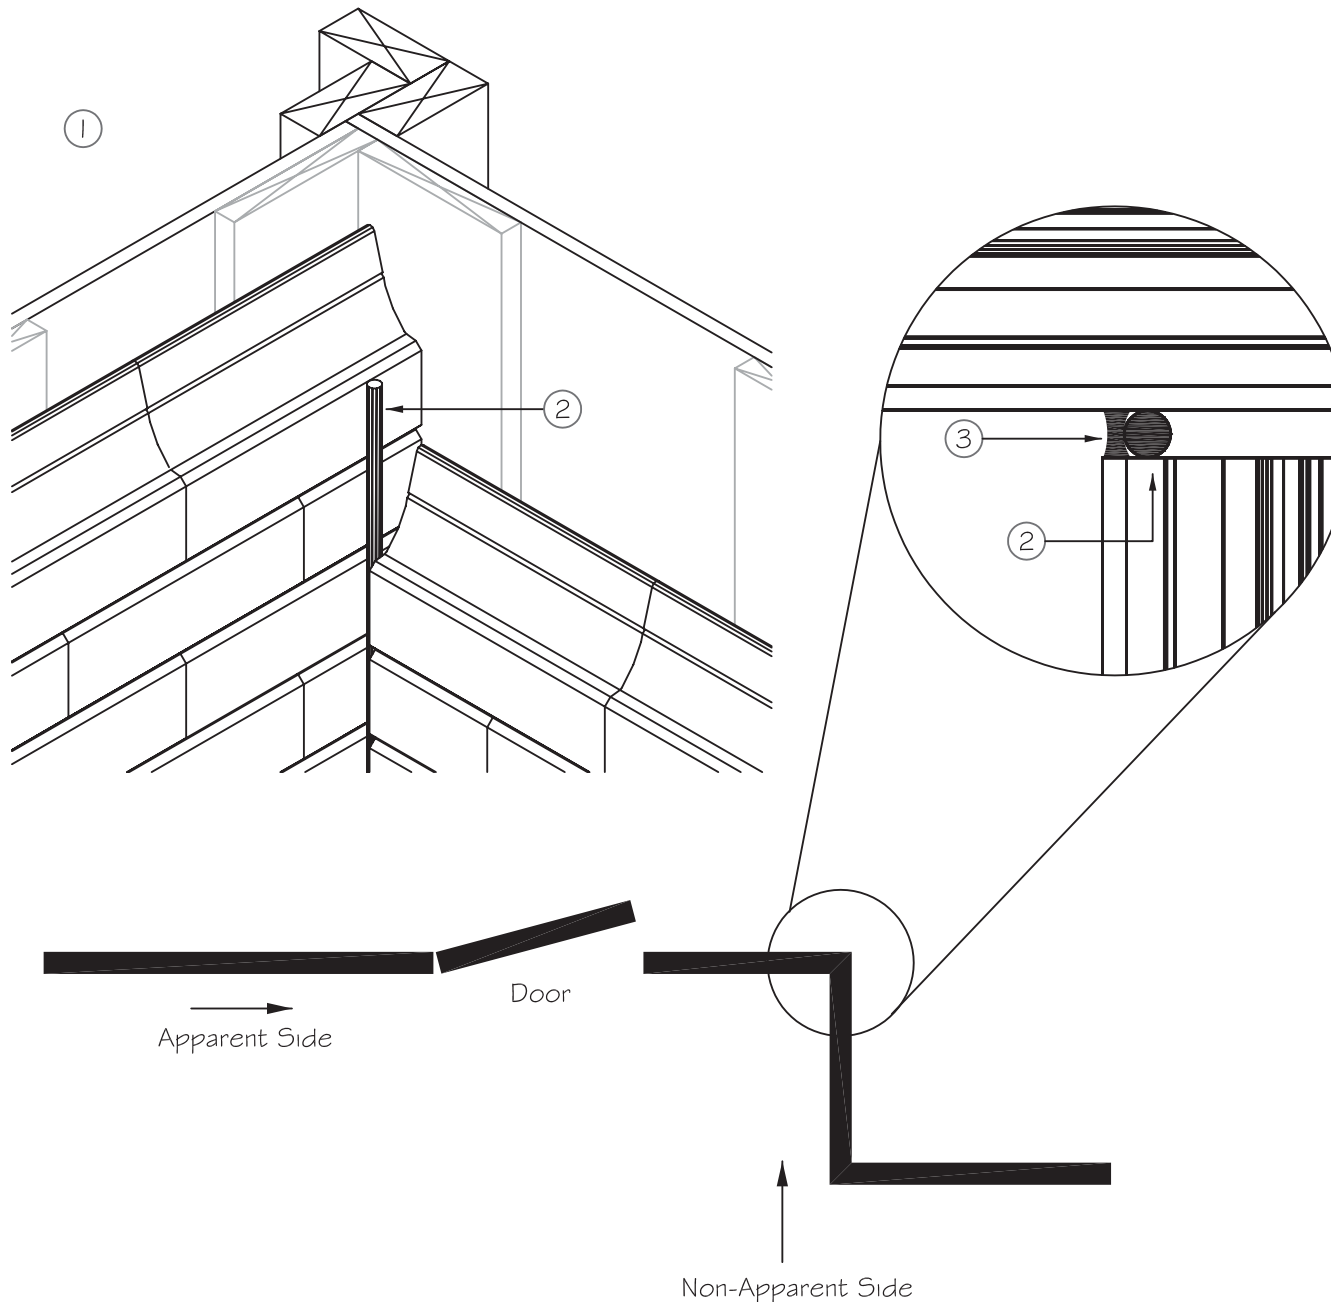

LEGEND:

- 1- Cover the corner with housewrap or with a self adhesive waterproof membrane. Install 1" x 6" (19mm x 140mm) boards over the corner. Install Novabrik on one wall all the way to the corner.
- 2- while installing the adjoining wall, lay a cord of backer-rod up the brick wall. Cut and attach end pieces to achieve a consistent a consistent 3/8" (10mm) gap.
- 3- Run a bead of sealant down the entire joint between the bricks.

