


4.3- Installation around openings

1- Window sill

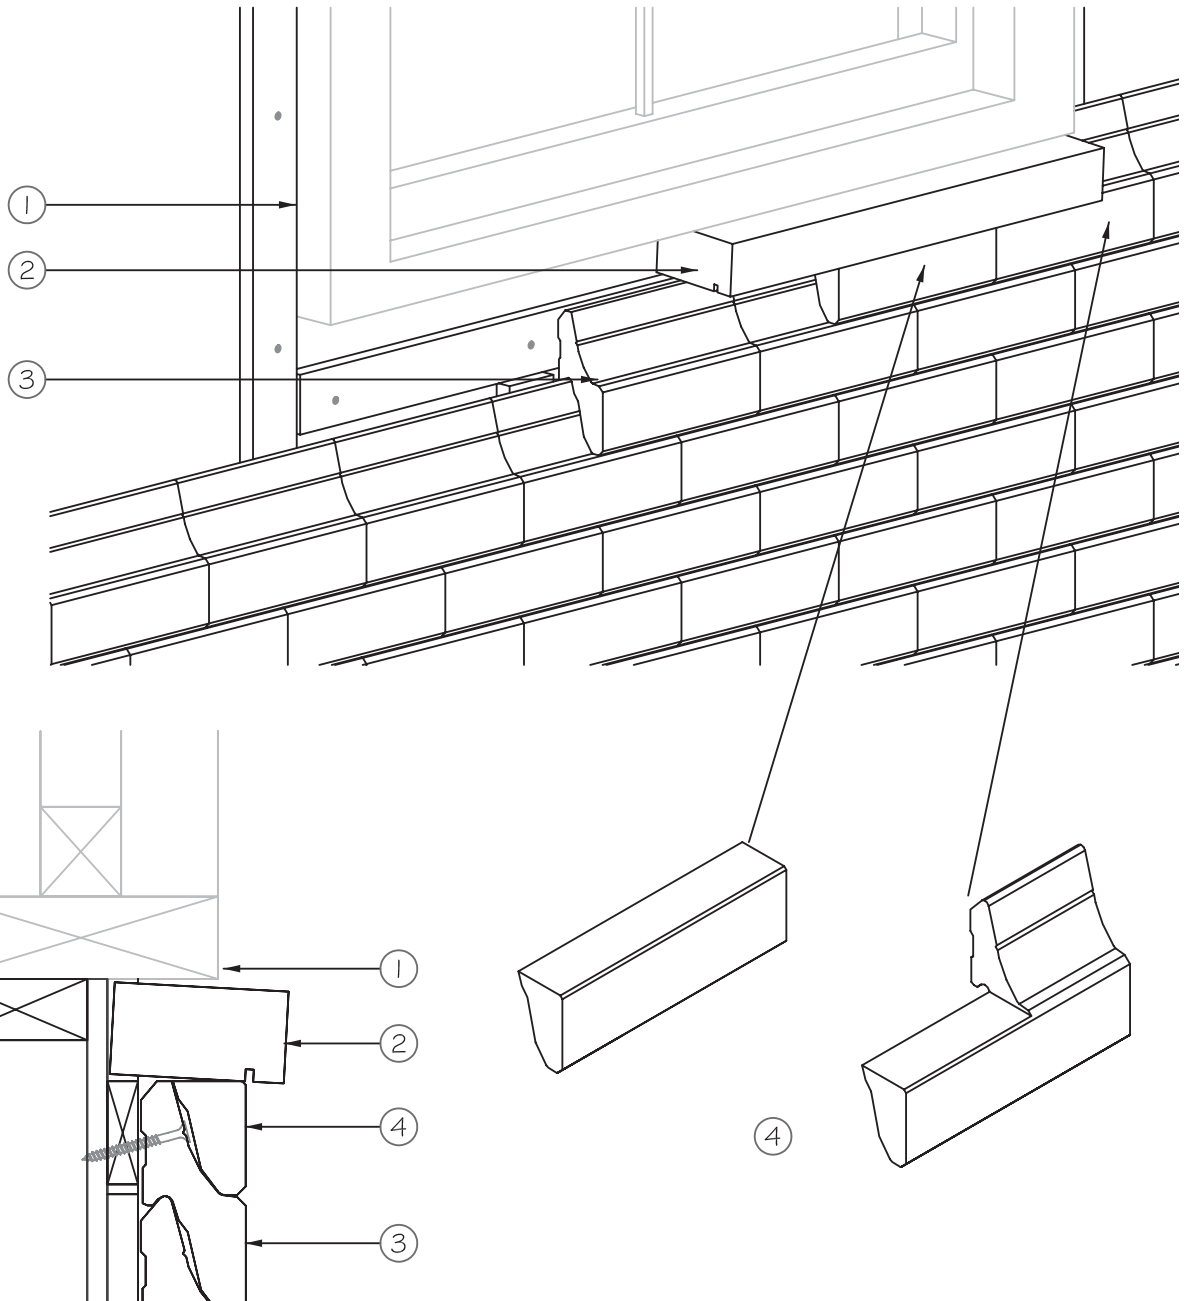

LEGEND:

- 1- Window frame, make sure there is enough space between the frame and the horizontal furring strip to insert the sill. The space should be the thickness of the sill plus 1/8" (4mm)
- 2- Window, sill set in construction adhesive. Make sure to caulk joint between window frame and top of sill (not shown).
- 3- Novabrik fastened with corrosion resistant screws at each brick. Cut the top of the bricks if necessary.
- 4- Filler pieces cut to fit and secure in place with construction adhesive.

