


4.6- Installation on Insulated Concrete Forms (ICF)

2- Corner details

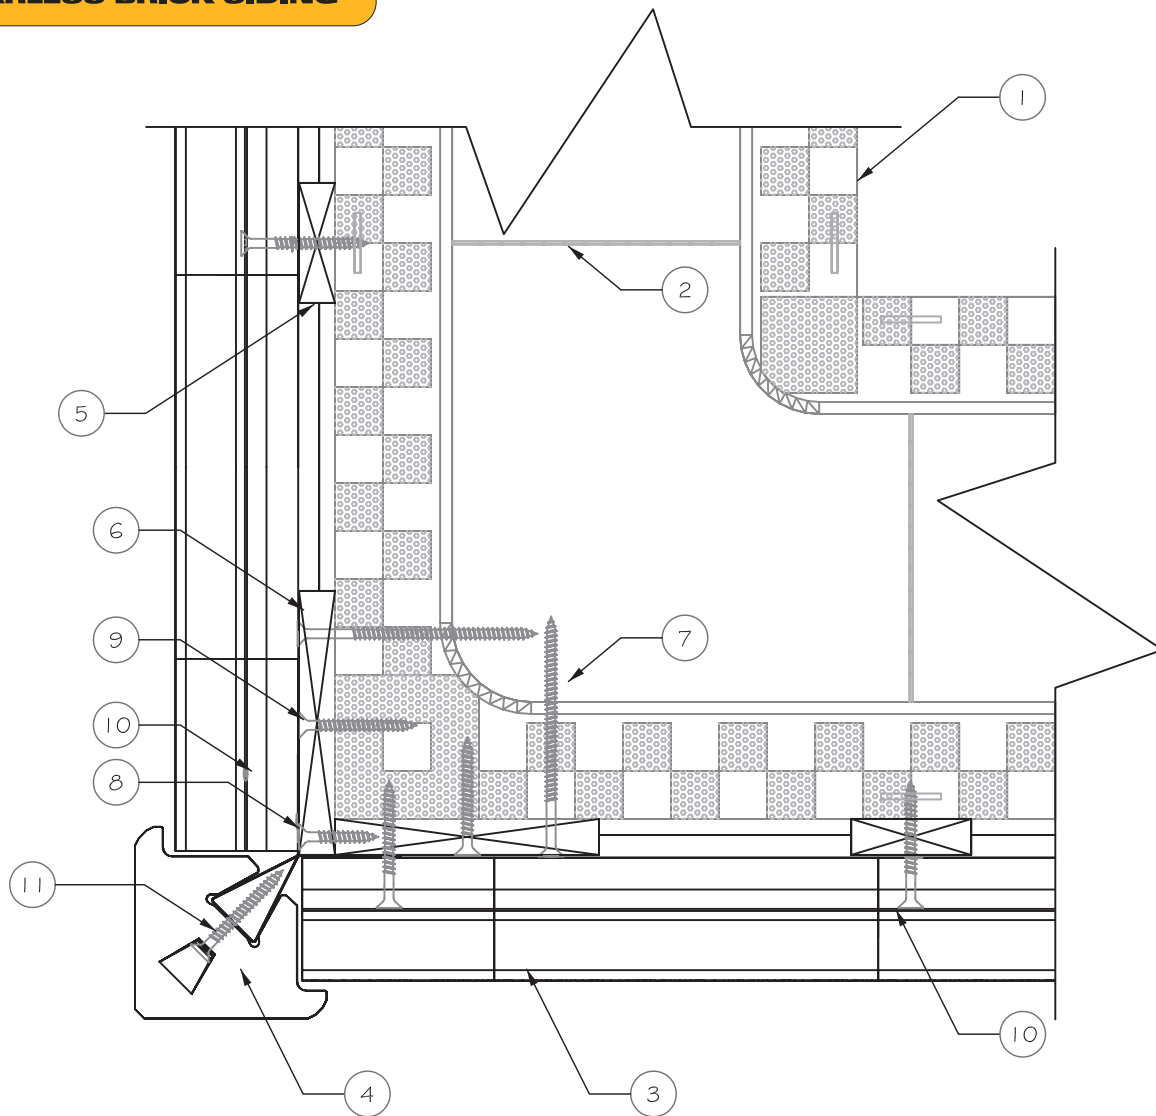

LEGEND:

- 1- ICF.
- 2- ICF plastic tie.
- 3- Novabrik.
- 4- Corner block.
- 5- Furring strip 1" x 3" or 1" x 4" (19mm x 64mm or 19mm x 89mm).
- 6- Furring strip 1" x 6" (19mm x 140mm) at corner end.
- 7- ¼" x 5" (6mm x 127mm) Tapcon screws at 10" (254mm) o.c. with ¼" (32mm) min. penetration into concrete. Have the two adjacent screws spaced at 5" (127mm) from each other (this will prevent the concrete to break)
- 8- #10 x 2½" (64mm) corrosion resistant screws at 16" (406mm) o.c.
- 9- #10 x 2½" (64mm) wood corrosion resistant screws at 16" (406mm) o.c.
- 10- #10 x 2½" (64mm) wood corrosion resistant screws.
- 11- #10 x 2½" (64mm) corrosion resistant screws on each block.

